




Flat Head Socket Cap Screw
(M6-12 X 4)




Multifunctional Desk Fixture X2

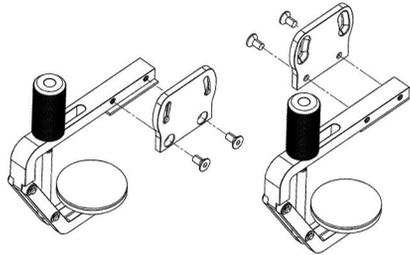


Install the P-DFT on a Wheelbase




M6x12
Flat Head Socket Cap Screw

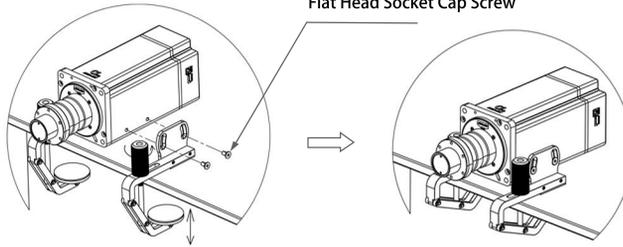

Install the P-DFT on a Sequential Shifter Q1S

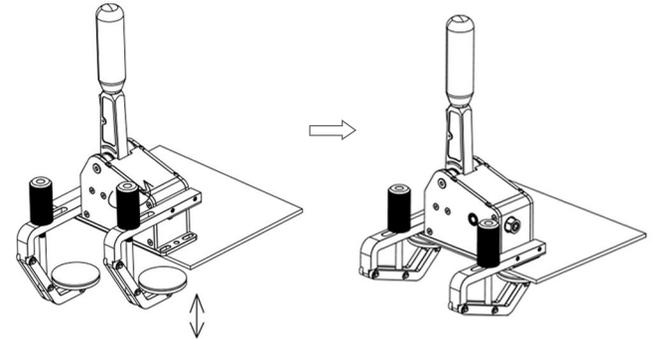

Install the P-DFT on a Sequential Shifter Q1

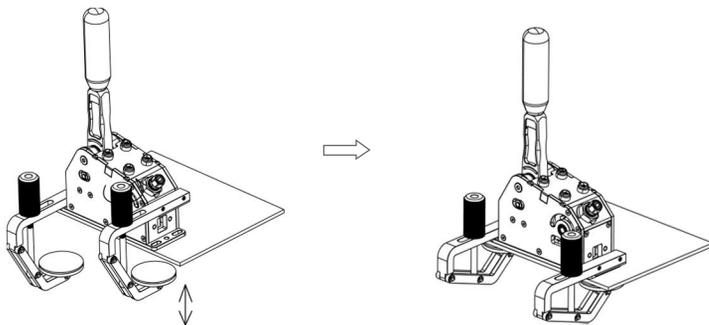

Install the P-DFT on a TB-1 Handbrake

