



拨片套装 (双拨片版) 快速指南


1.0 配件清单

- | | |
|--|--|
|  拨片组垫高铝柱 x4 (3.1x5x3mm) |  拨片组垫高铝柱 x4 (3.1x5x5mm) |
|  沉头螺钉M3-6 x 6 |  沉头螺钉M3-8 x 10 |
|  沉头螺钉M3-12 x 6 |  圆头螺钉M3-6 x 6 |
|  六角扳手 x 2 (2mm/2.5mm) | |




2.0 安装



- 2.1 ① 塑料换挡拨片与碳纤维换挡拨片板: 使用沉头螺钉M3-8固定
② 铝制换挡拨片板: 使用沉头螺钉M3-6固定
③ 离合拨片板: 使用圆头螺钉M3-6固定

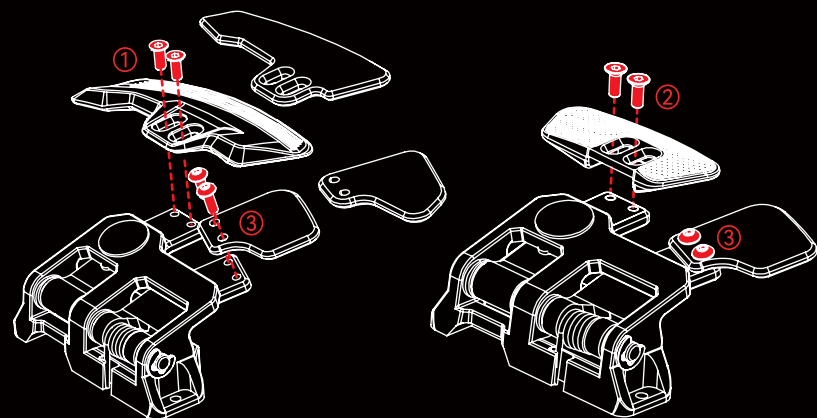


- 2.2 根据所需要距离, 选择3mm或者5mm高度的垫高铝柱, 如图用沉头螺钉M3-12固定在拨片上 (沉头孔面朝上)

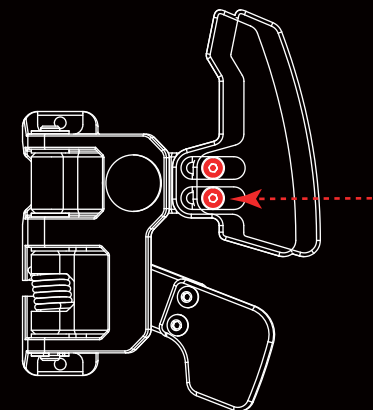


- 2.4 用两颗沉头螺钉M3-8固定延长件到拨片上后, 再用两颗沉头螺钉M3-8固定塑料换挡拨片与碳纤维换挡拨片板

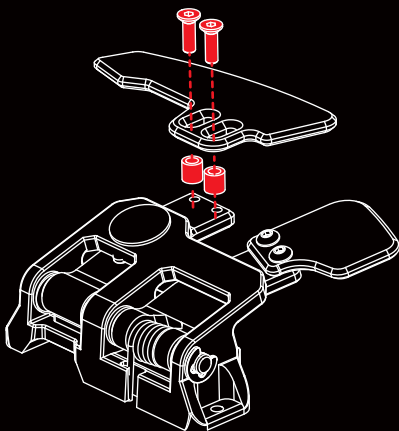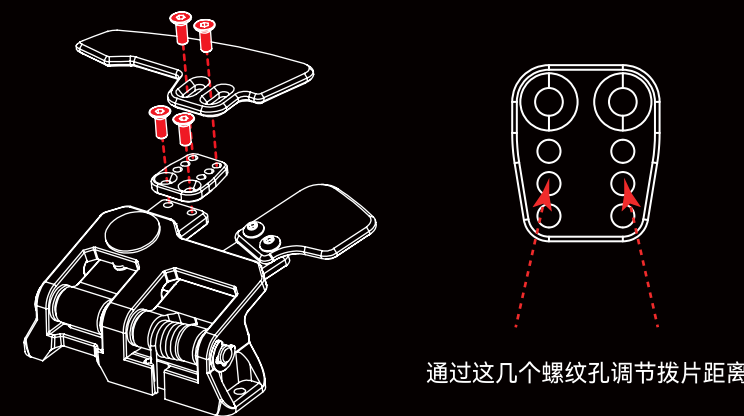


- 2.3 通过调整两颗沉头螺钉M3, 调整拨片板的距离

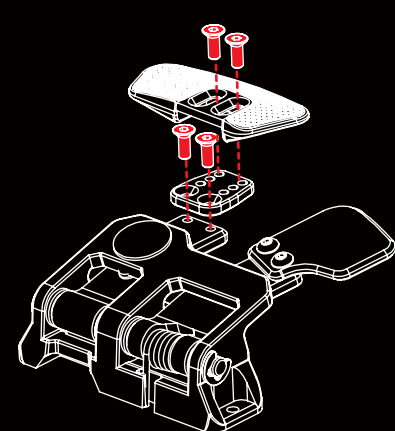

- 2.6 拧下固定装饰盖的M3螺钉, 取走装饰盖

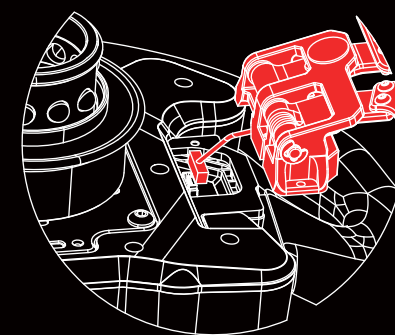


- 2.5 用铝制换挡拨片板时: 使用沉头螺钉M3-6固定

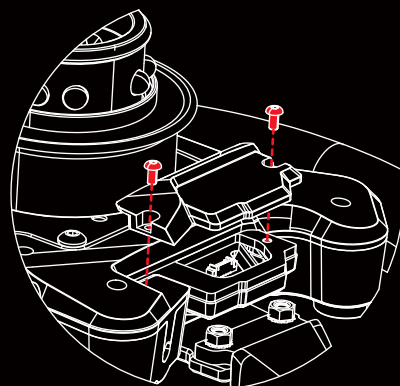

- 2.7 把双拨片组的端子线插到方向盘端子处

- 2.8 用拧下的M3螺钉固定双拨片组

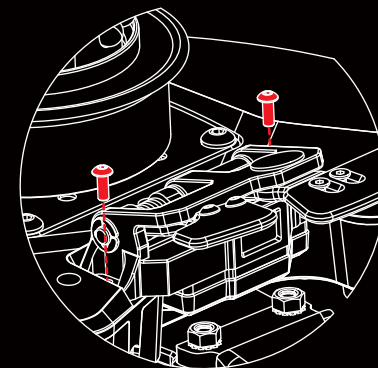

软件及应用



在PC端安装
SimPro Manager
进行设置




产品教程
(更多相关资料扫码查看)



Paddle Shifter Kit Dual Paddle Edition Quick Guide


1.0 List of Accessories

-  Spacer Column x4 (3.1x5x3mm)
-  Spacer Column x4 (3.1x5x5mm)
-  Countersunk Head Screw M3-6 x 6
-  Countersunk Head Screw M3-8 x 10
-  Countersunk Head Screw M3-12 x 6
-  Button Head Socket Cap Screw M3-6 x 6
-  Allen Key x2 (2mm/2.5mm)


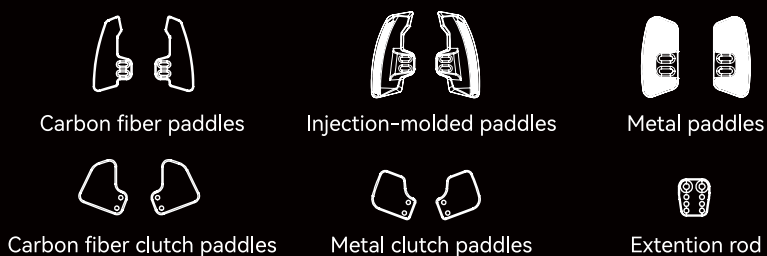


2.0 Installation

- 2.1 ① Injection-molded and carbon fiber paddles: install with countersunk screws M3-8.
- ② Metal paddles: install with countersunk screws M3-6.
- ③ Clutch paddles: install with round-head screws M3-6.

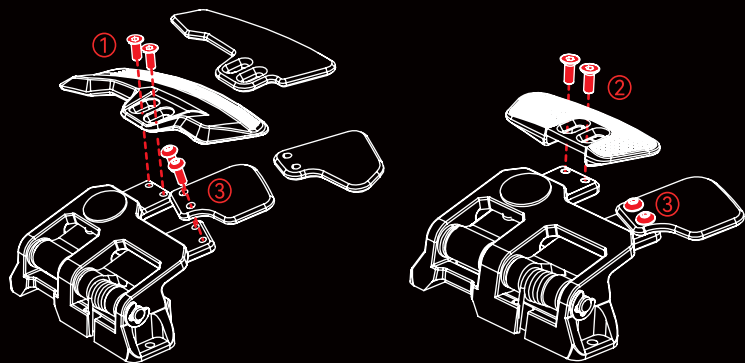


2.2 Based on the required distance, select a spacer column with a height of 3mm or 5mm. As shown in the diagram, secure it to the paddle using countersunk screws M3-12 (ensure the countersink side faces upward).

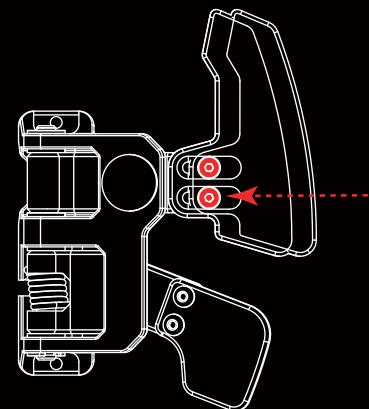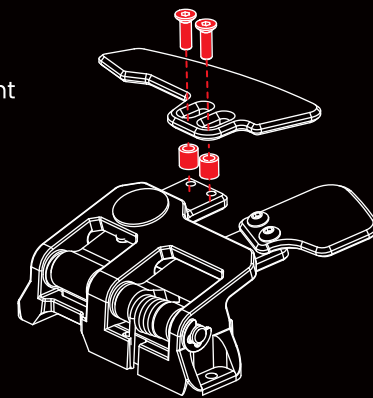


2.3 Adjust the paddle plate's distance by fine-tuning the two countersunk screws M3.

2.4 After installing the extender to the paddle with two countersunk screws M3-8, use two countersunk screws M3-8 to install the injection-molded or the carbon fiber paddle.

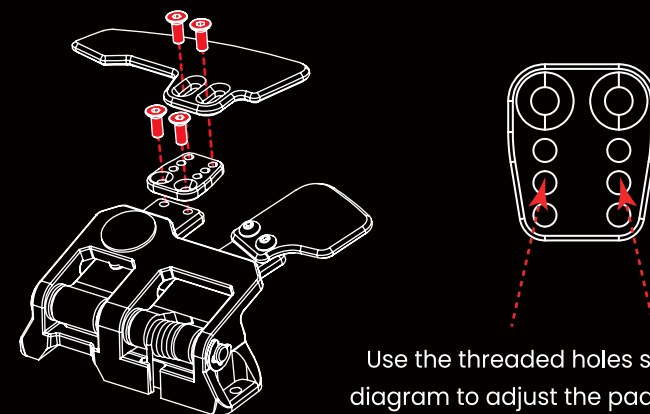


Use the threaded holes shown in the diagram to adjust the paddle distance.

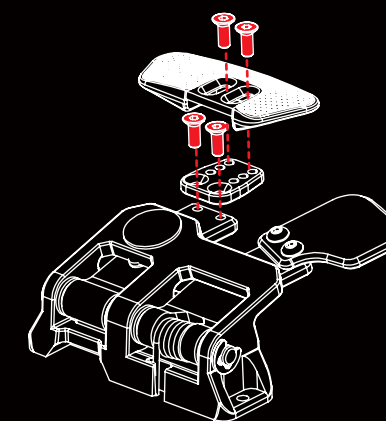

2.5 For metal paddles, use countersunk screws M3-6 to secure the paddle.




2.6 Unscrew the M3 screws securing the decorative cover and remove the cover.

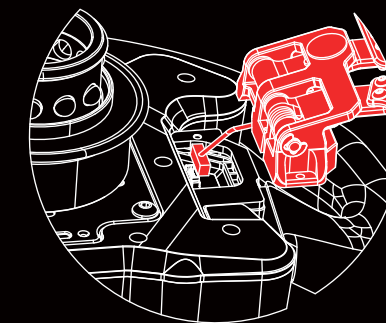

2.7 Plug the double-paddle assembly's cable into the connector on the steering wheel.

2.8 Use the removed M3 screws to secure the double-paddle assembly.

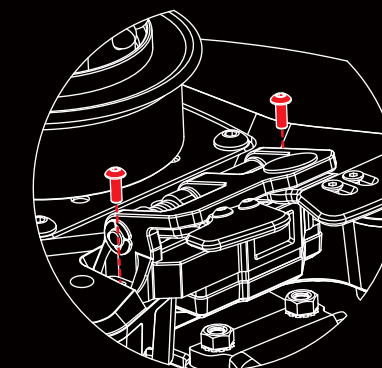

Software & applications



Install SimPro Manager
on PC to complete setup



Product Tutorial
(Scan the QR code to
view more)